
C1-C3


B 00 0

4-C3

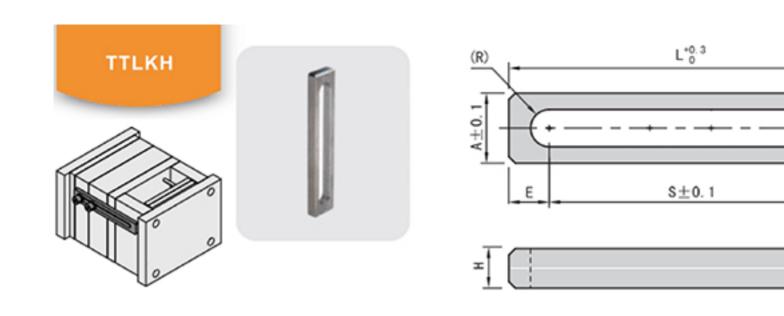

Order TTLK	H-A-S 🖾 :S45C	;				
A	s	н	В	E	L	@¥/P
19	50-230(250)	16	11	14.5	S+29	
25	50-270(300)		14	17	S+34	
32	80-350(400)		17	18.5	S+37	
38	100-400(450)		21	20.5	S+41	





## Installation Guidelines:

· Allows have 1mm clearance on installation, in order to prevent friction between tension links and mold plate. (As shown in the left)