


Order	TTLWH-A-L-S-T	■ :S450	С					
A	s	L	т	н	В	Ε	E1	@¥/P
19	15-130	100-320	40-140	16	11	25	15	
25	15-135	115-335	40-140		14		17.5	
32	25-140	140-385	50-180		17	28	18.5	
38	25-150	150-410	50-185		21	34	20.5	

4-C3



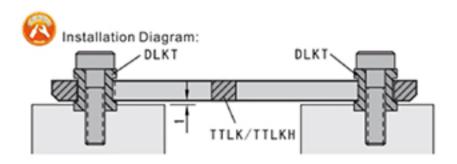

## Installation Guidelines:

· Allows have 1mm clearance on installation, in order to prevent friction between tension links and mold plate.(As shown in the left)