


Order TTLH-A-S **M** :S45C

A	S	H	B	E	E1	L	d	F	@ V/P
19	50-270	16	11	20	14.5	S+49	10.5	24	
25			14	23	17	S+57	13.5	28	
32	80-300		17	30	18.5	S+67	16.5	32	
38	100-350		21	33	20.5	S+74	20.5	38	



Installation Diagram:

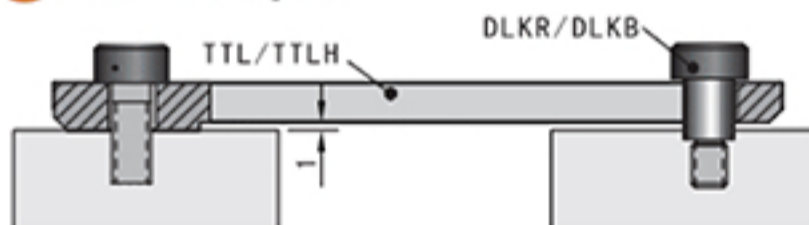

Installation Guidelines:

- Allows have 1mm clearance on installation, in order to prevent friction between tension links and mold plate. (As shown in the left)

